1、登陆AP设备、输入管理员名称和密码









注意:开启此选项后AP的工作模式即变为NAT模式。 如果AP只作为无线透传模式,不需要由AP给终端分配IP地址,不需要开 启配置此项







8、配置5G频段SSID与无线参数



9、升级方法(可选)

Ruckus 7982 Multimedia Hotzone Wireless AP	
Device	Aaintenance :: Upgrade
Internet Local Subnets Radio 2.4G Radio 5G	Upgrade Method: O TFTP O FTP O Web O Local
Configuration Device	Local Options Local File Name: 浏览
Internet Local Subnets Radio 2.4G Radio 5G Ethernet Ports Hotspot	WARNING: Upgrading the firmware could take a few minutes and your network will not be available during this time. Please do NOT remove power from your Router or Adapter until the upgrade finishes. Perform Upgrade
Maintenance Upgrade Reboot / Reset Support Info	升级过程中不能拔 网线,不能手工重 启AP,不能Reset AP

